

HYUNDAI Genuine Approved Accessories

Vehicle Model	TUCSON
Model Year	2011
HMA Part No.	2SF46 AC100
Vendor Part No.	

Accessory _____
Difficulty _____
Pamphlet No. _____
Revision No. _____

- Accessory Installation

Note: Difficulty stated above reflects the minimum level of expertise required to install the accessory
(A) Customer (B) Dealer Technician (C) Master Technician

Instructional Symbols / Definitions



Denotes warnings that may lead to serious physical injury or vehicle damage.



Denotes quality processes to be checked prior to moving to the next step.

Denotes safety equipment required to be used such as a mask, goggles, rubber gloves, and hearing protection.



Denotes cautions to be taken to avoid physical injury or electronic component damage.



Denotes specific tools that are necessary to complete the step.



Denotes cautions to be taken to avoid vehicle and component damage.

NOTE

Denotes instructional steps necessary to complete the process.



Mask



Goggles







Rubber Gloves



Hearing Protection

Basic Required Hand Tools

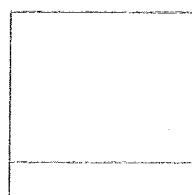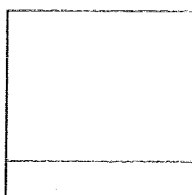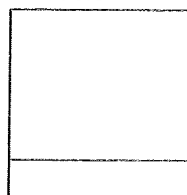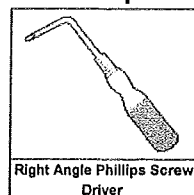

Specialty Required Tools

[illegible]

Notes to the Installer

Read the entire installation pamphlet prior to beginning the installation of the accessory.

Ensure that the vehicle is properly protected in the area that the accessory is to be installed.

To prevent vehicle damage, never place tools on top of painted surfaces, seats, dash pad, console or floor carpet / mat.



Always wear appropriate safety gear to include gloves and eye protection when required.

HYUNDAI Genuine Approved Accessories

HYUNDAI Overview

No.	Qty.	Description	No.	Qty.	Description	No.	Qty.	Description
1	1	LH Mud Guard	9			17		
2	1	RH Mud Guard	10			18		
3	1	Hardware Bag	11			19		
4			12			20		
5			13			21		
6			14			22		
7			15			23		
8			16			24		



Hardware Overview


A		F		K		P		U	
4	T/Screw (6mm x 25mm)								
B		G		L		Q		V	
2	Bumper Retainer								
C		H		M		R		W	
D		I		N		S		X	
E		J		O		T		Y	

Hardware Kit Total

6


HYUNDAI Genuine Approved Accessories (Installation)

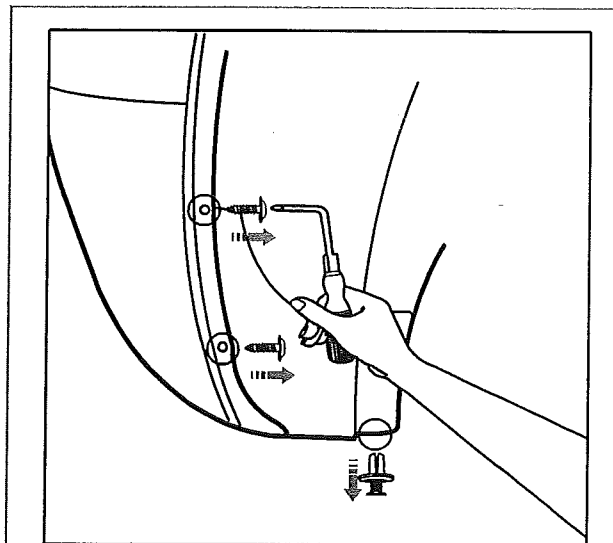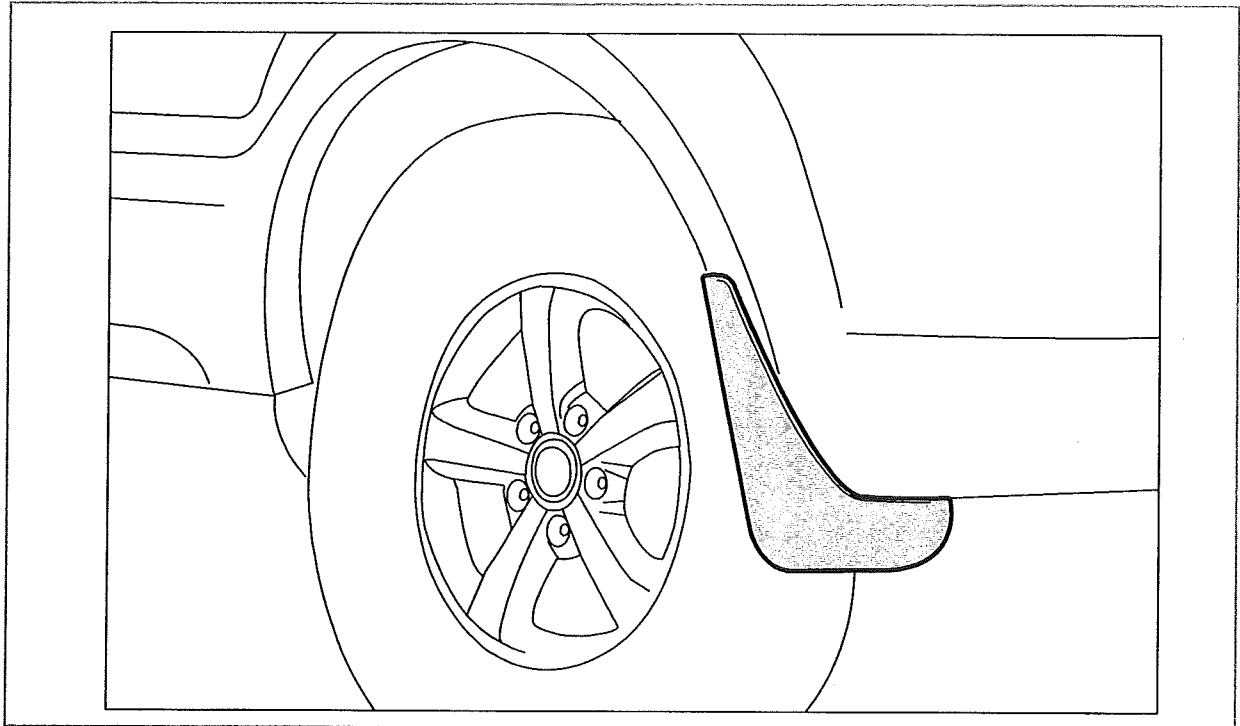


 Right Angle Phillips Screw Driver

NOTE Remove the two screws and one retainer from the highlighted areas by using Right Angle Phillips Screw Driver.

1


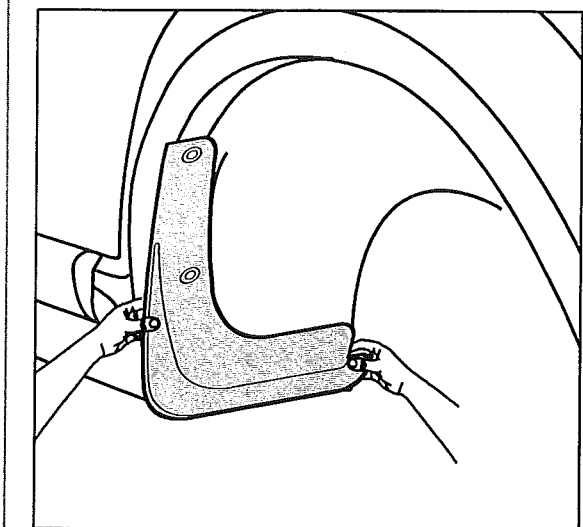







 Align mud guard ensuring proper fit.

NOTE

2

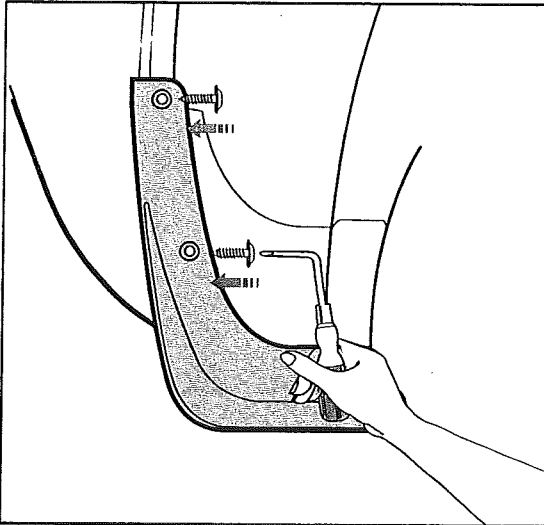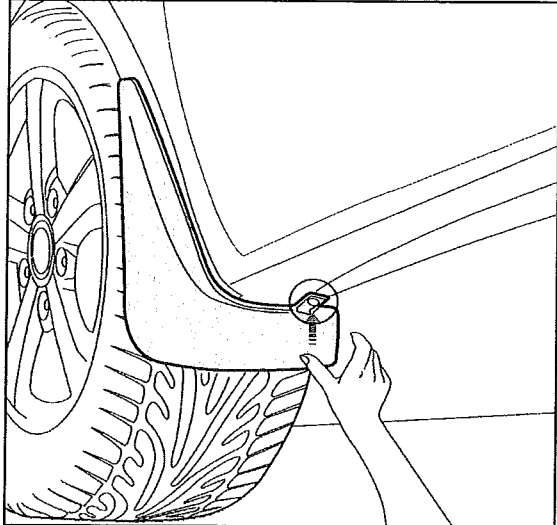HYUNDAI Genuine Approved Accessories (Installation)

			
 Right Angle Phillips Screw Driver		 Retainer	
3		4	
NOTE Insert and fasten the two screws as shown. Make sure to push the mud guard inward during the installation to eliminate any possible gaps.		NOTE Insert a retainer as shown. Repeat the steps for opposite side.	
 After the installation, check for visible gap and if it does not meet a maximum allowable gap(1.5mm), loosen the mounting screws and refit the mud guard to the body to achieve the specification.			
			
NOTE		NOTE	