



TOYOTA

ALWAYS A
BETTER WAY

Avensis sedan / wagon

Rear bumper protection film

Installation Instructions

Model year: 2015/05

Vehicle code: **T27**-A****W

Part number: PW178-05006 (Sedan)
PW178-05007 (Wagon)

Manual reference number: AIM 003 428-0

Revision record


Rev. No.	Date	Page	Picture	Update	New	Deleted steps

PW178-05006 / PW178-05007


A



1x

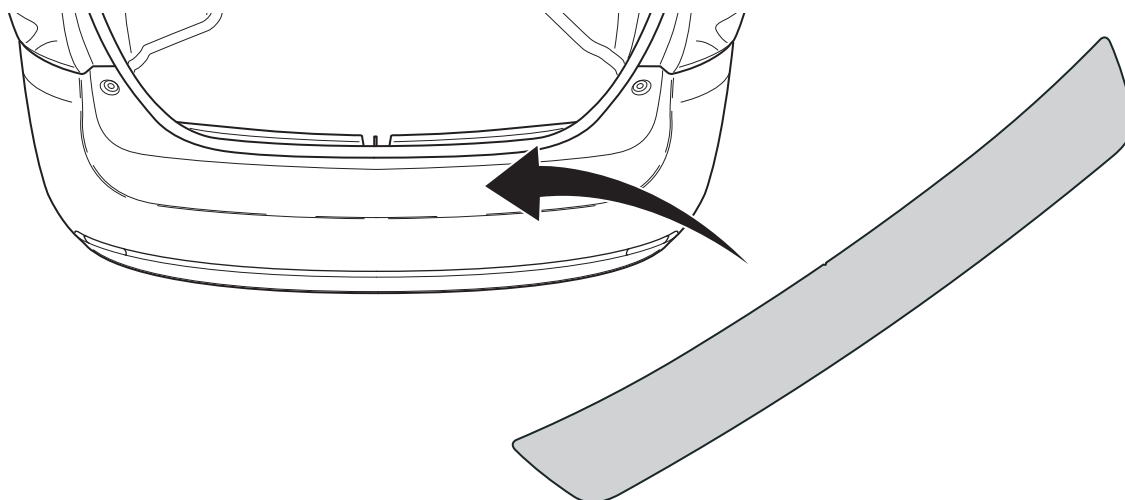

PZ438-00030-90



3M Gold squeegee + Low friction sleeve
NOT INCLUDED




Sprayer






40°C


18°C

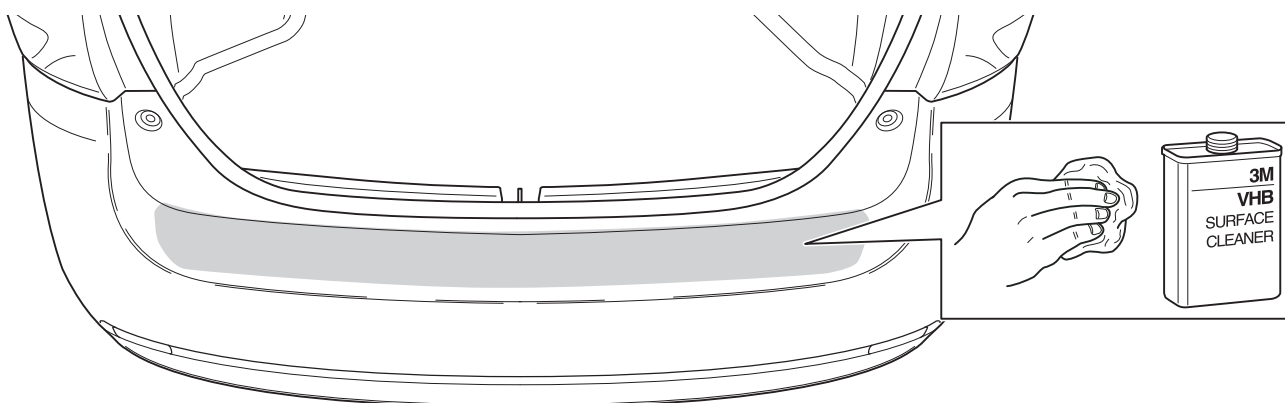


1

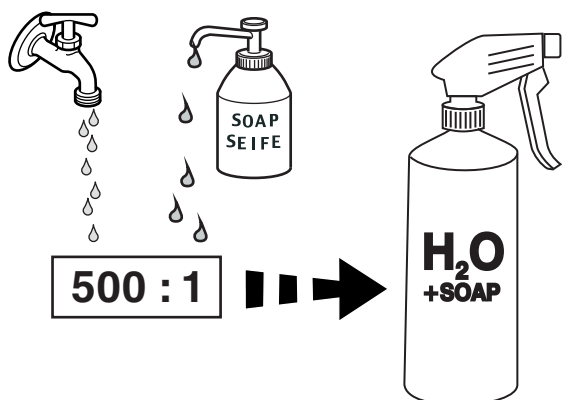


2

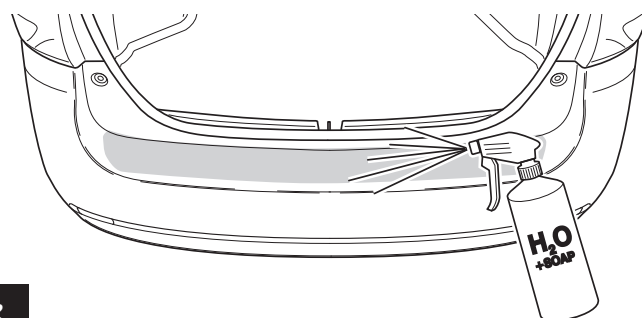


3

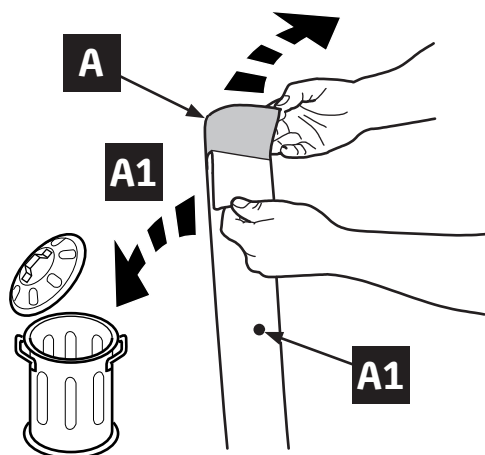


4

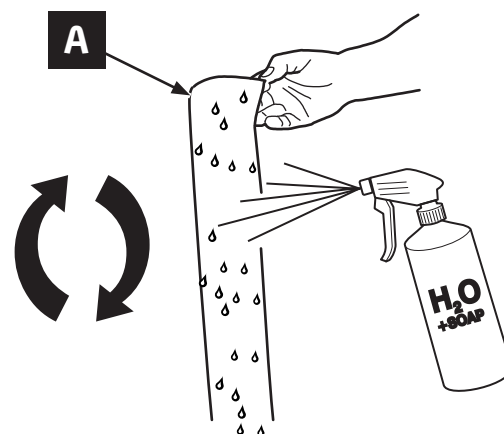


5

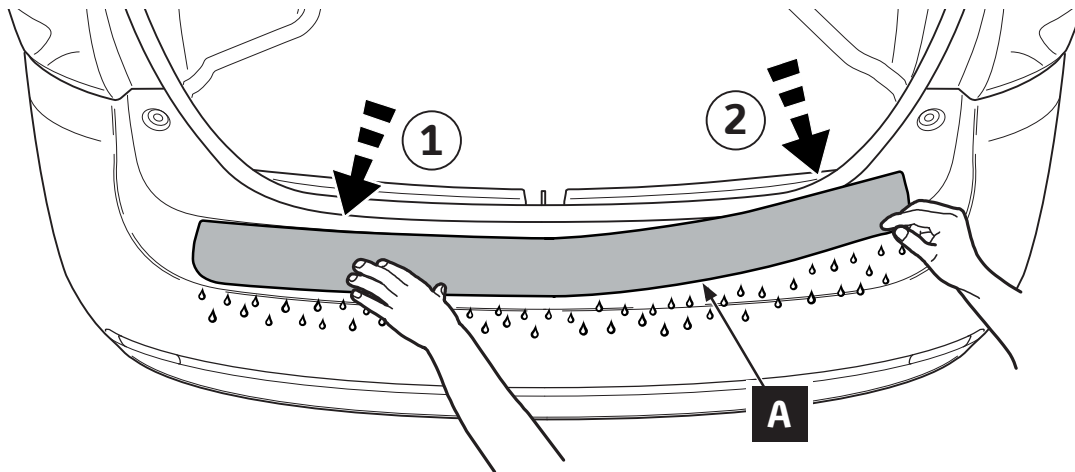


6

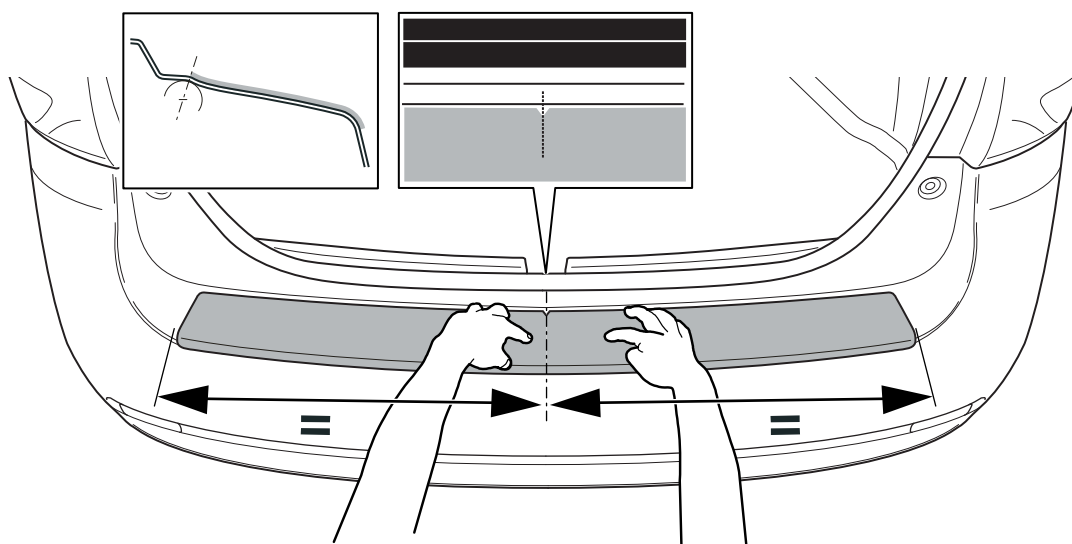


7

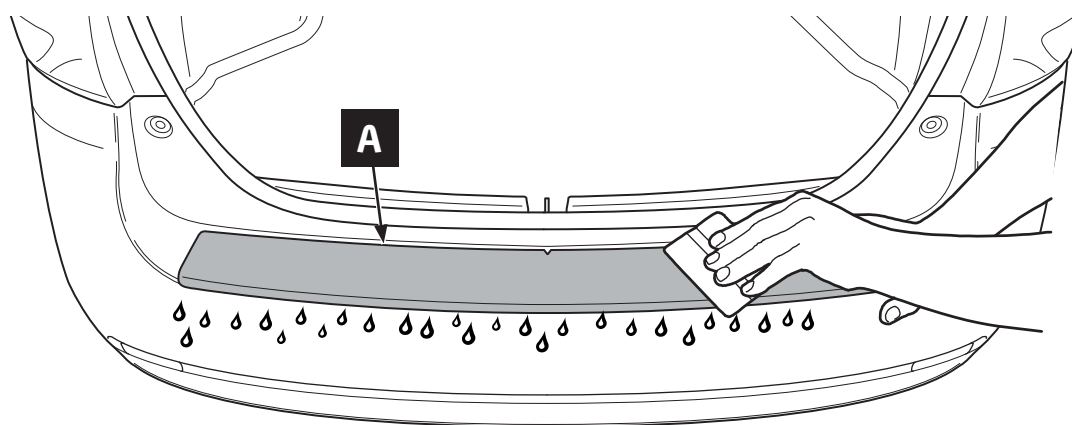


8

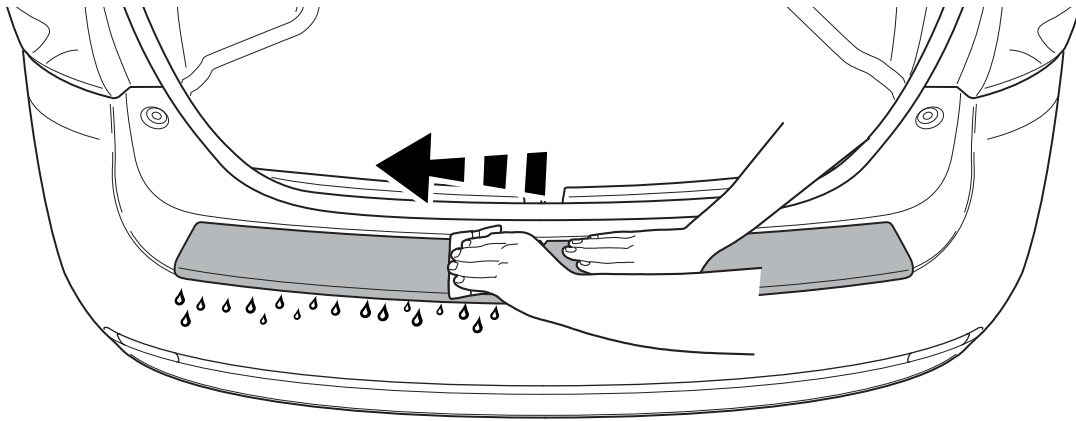


9

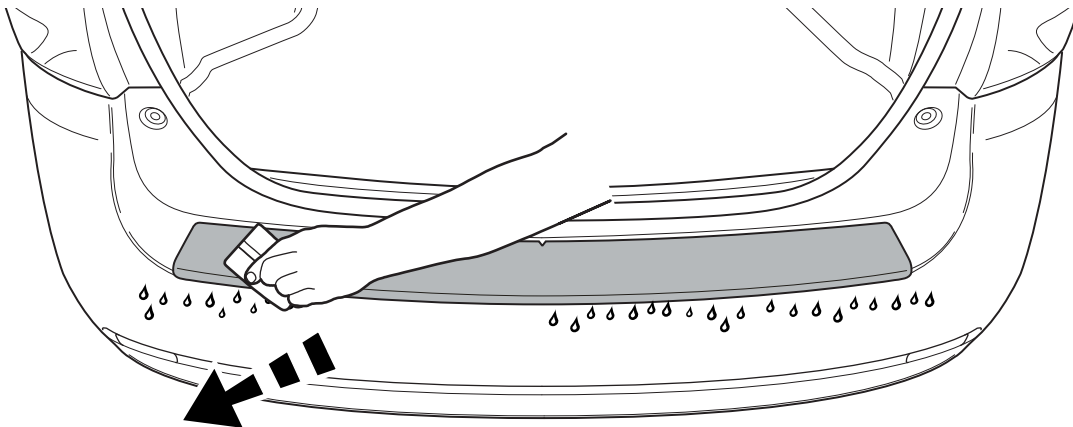





10

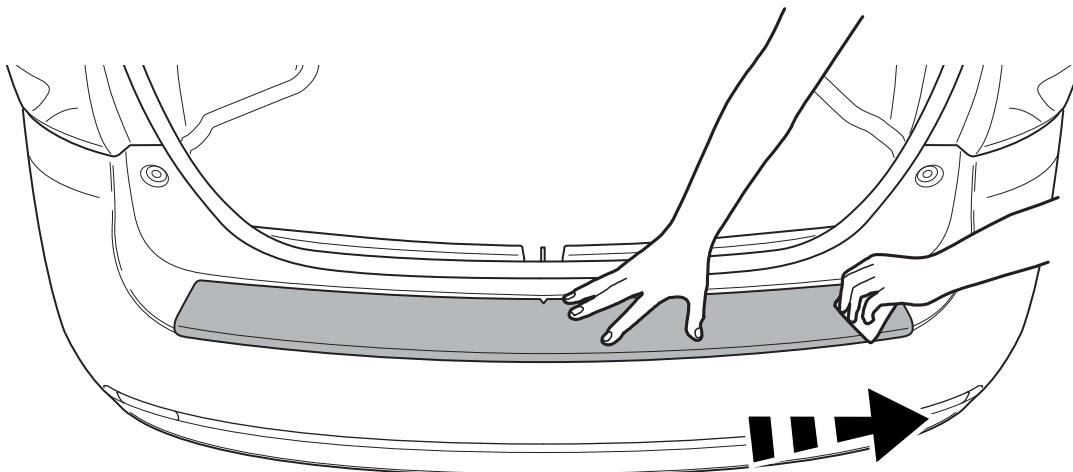

11

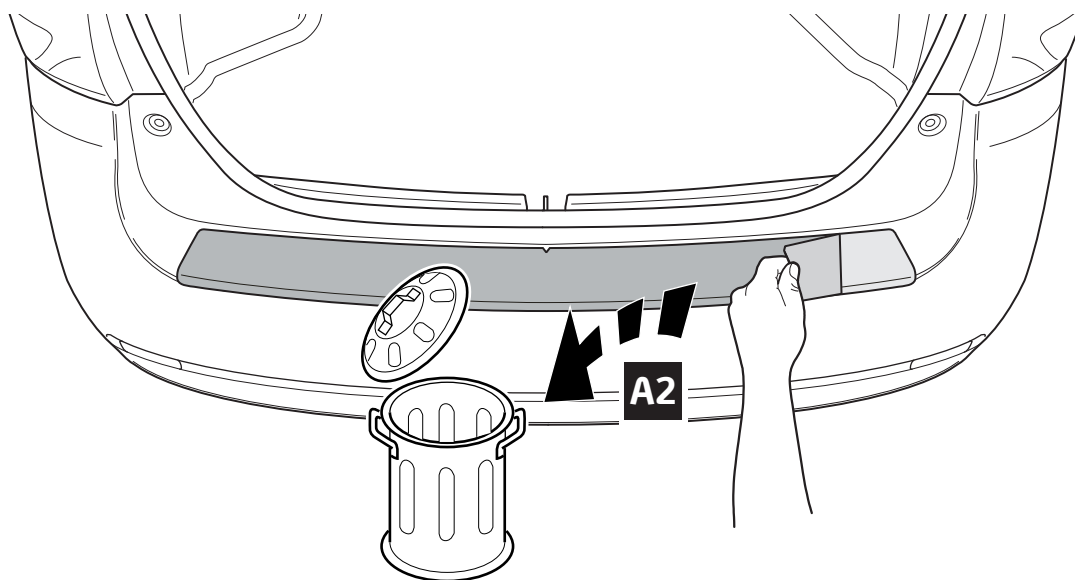

12

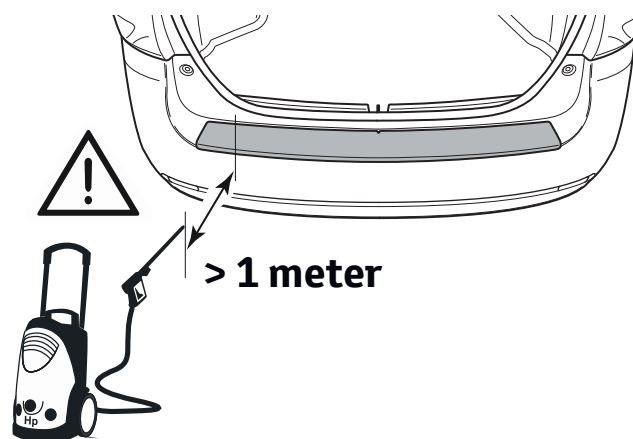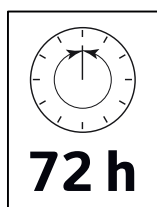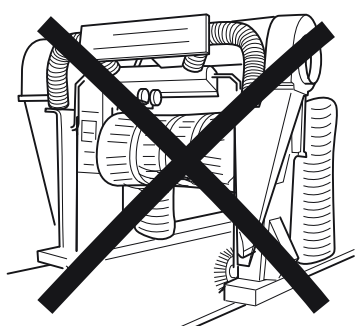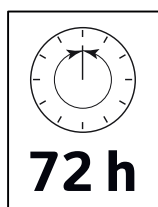

CHECK SHEET



TOYOTA




Model / Year

**Avensis sedan / wagon
2015/05**

**Rear bumper
protection film**

VIN n°

ALWAYS A
BETTER WAY

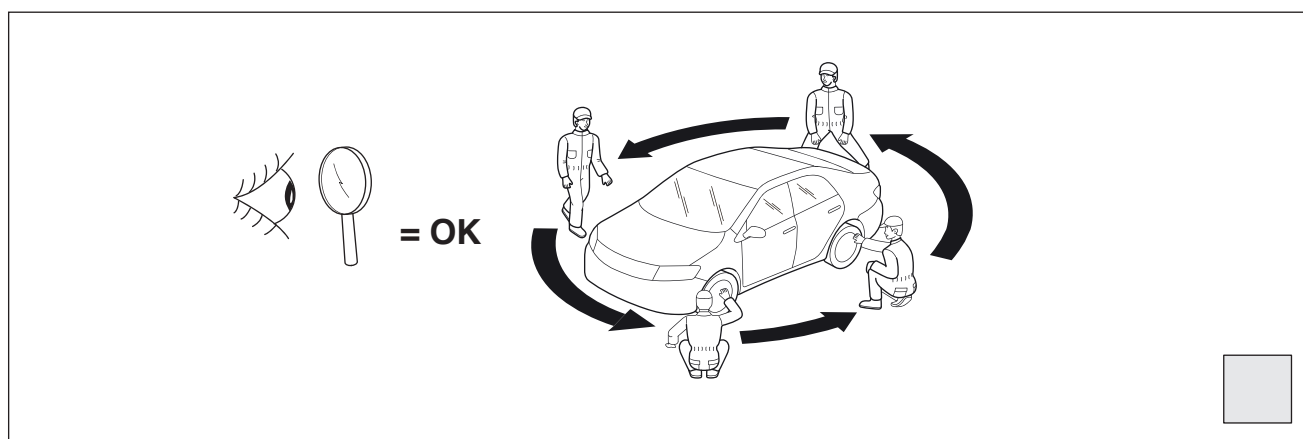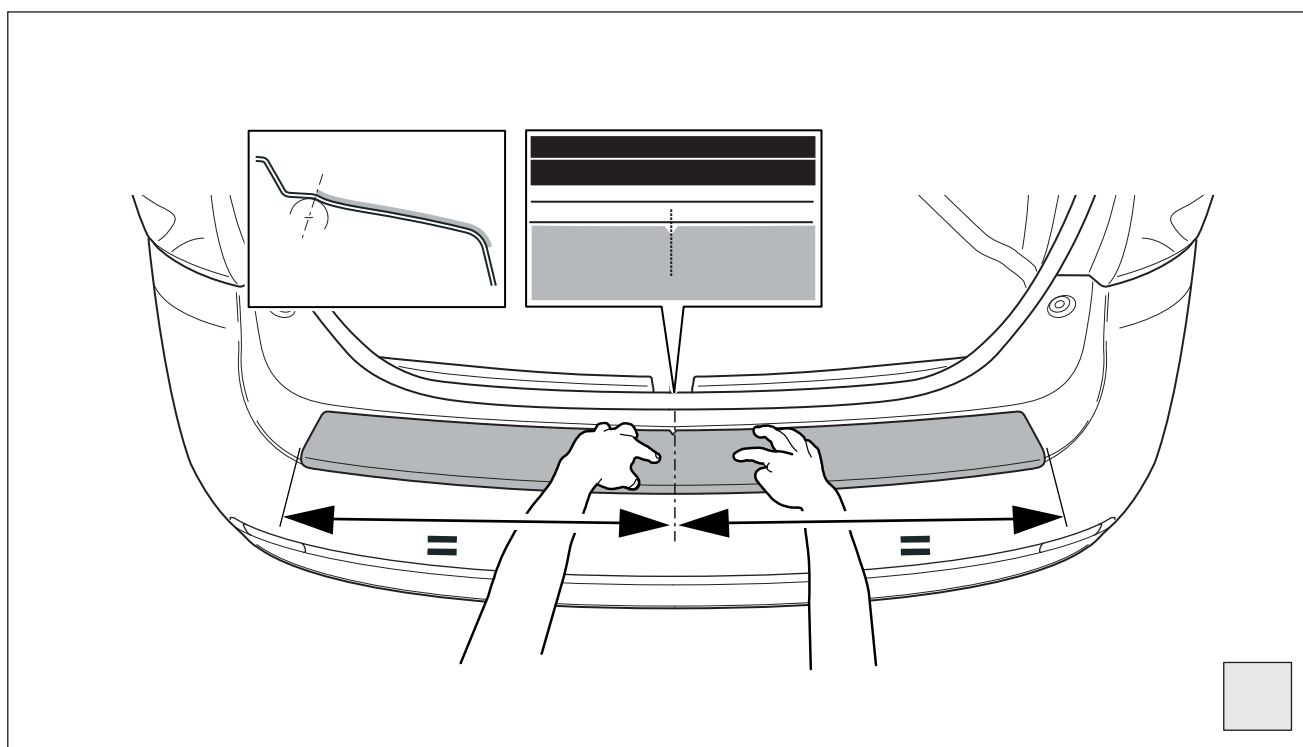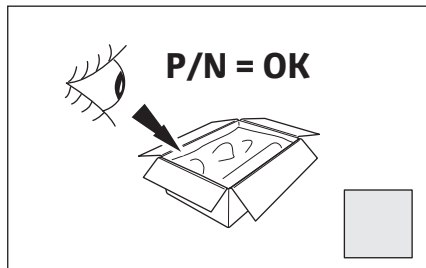

Installation Date:

. . / . . /

Technician Name & Signature:

Stamp: