



TOYOTA

ALWAYS A
BETTER WAY

Avensis Wagon

Vertical Cargo Net

Installation Instructions

Model year: 2008/11, 2011/11, 2015/05

Vehicle code: **T27*-A****W


Part number: PZ472-T5340-ZA

Manual reference number: AIM 003 477-0

Revision record


Rev. No.	Date	Page	Picture	Update	New	Deleted steps

A

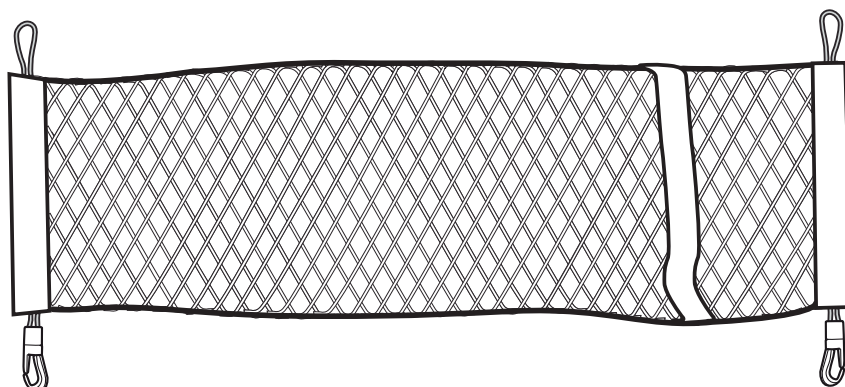


1x

B

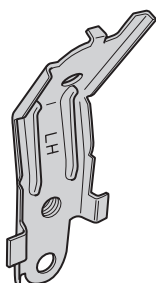

1x

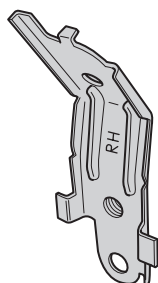


1x

C



2x

D

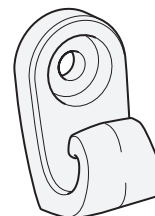

2x





E



2x






ph2

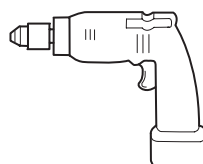
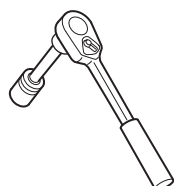



Ø 3 mm






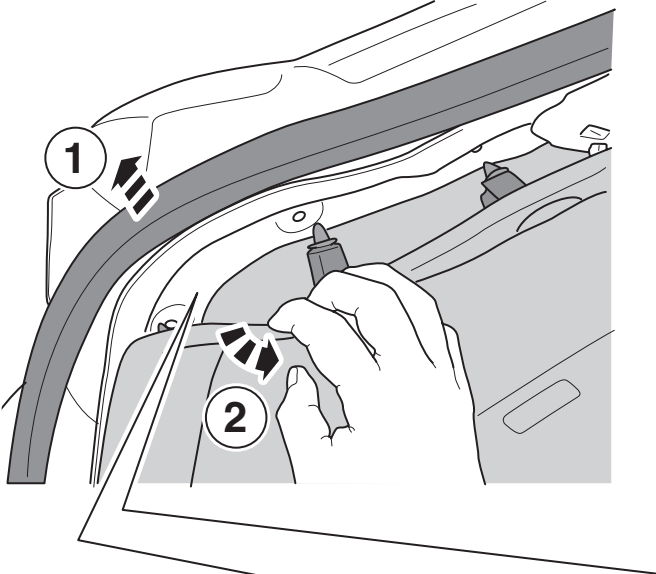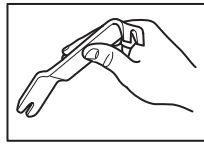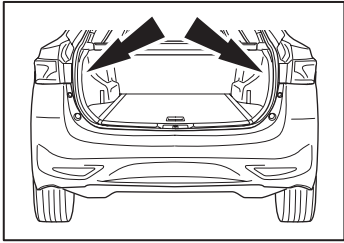



1

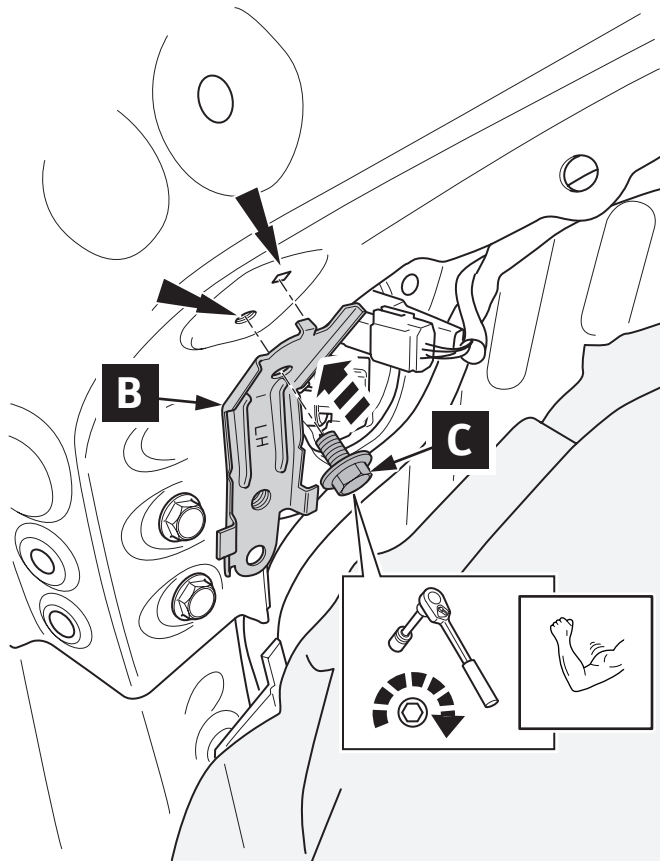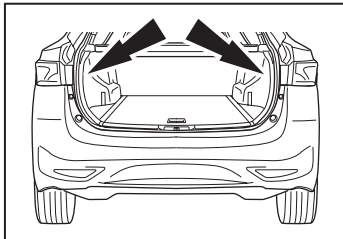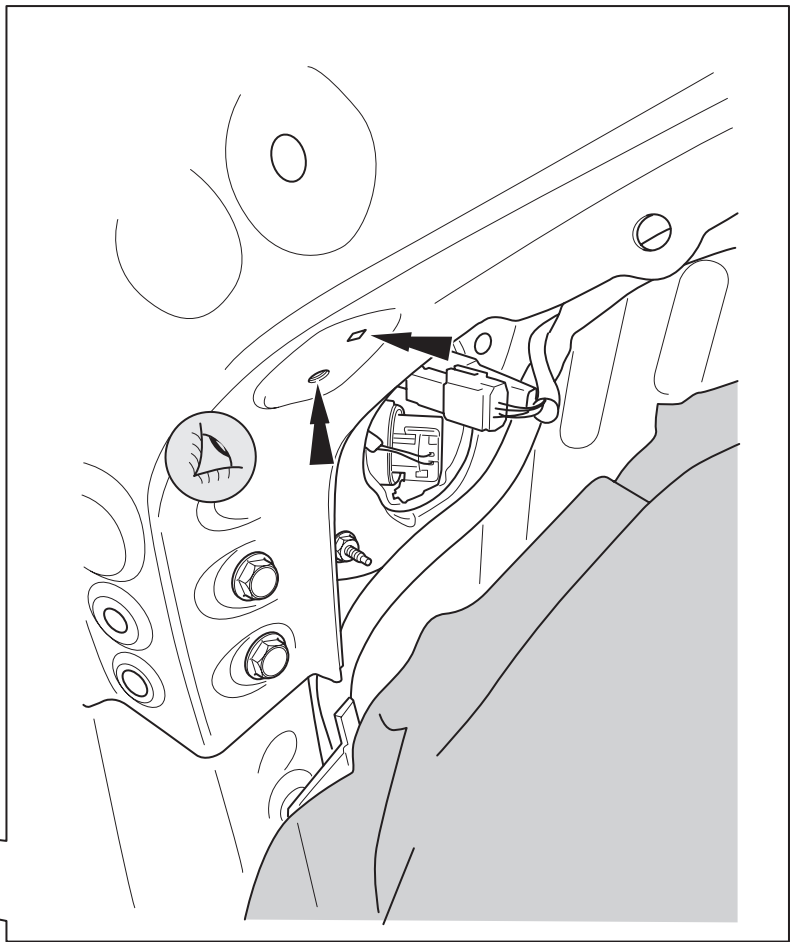

2

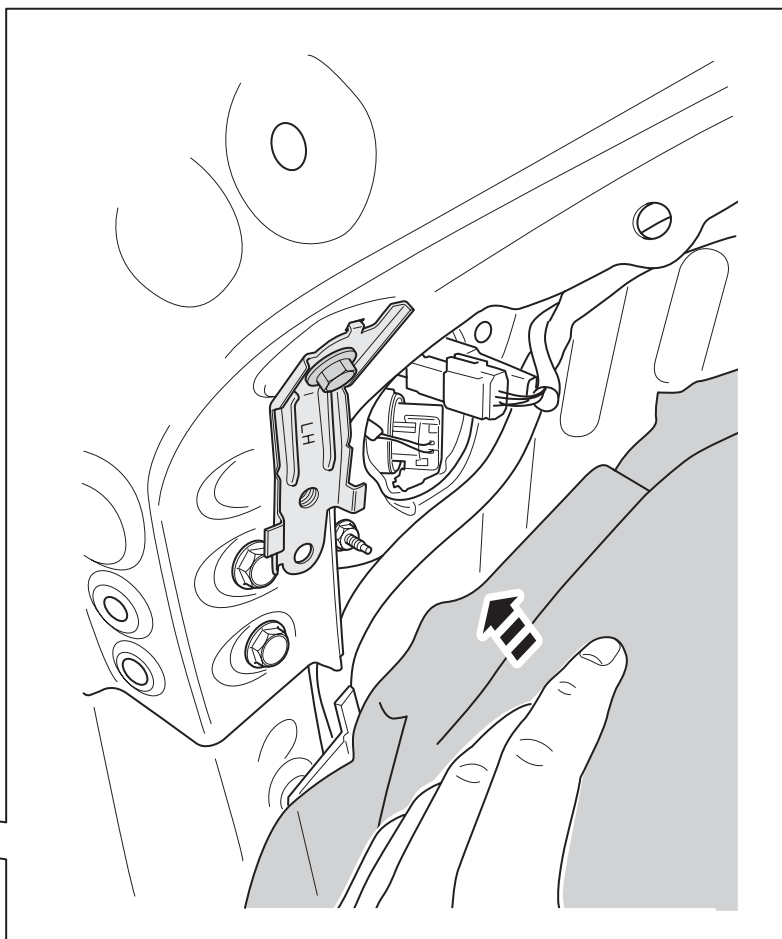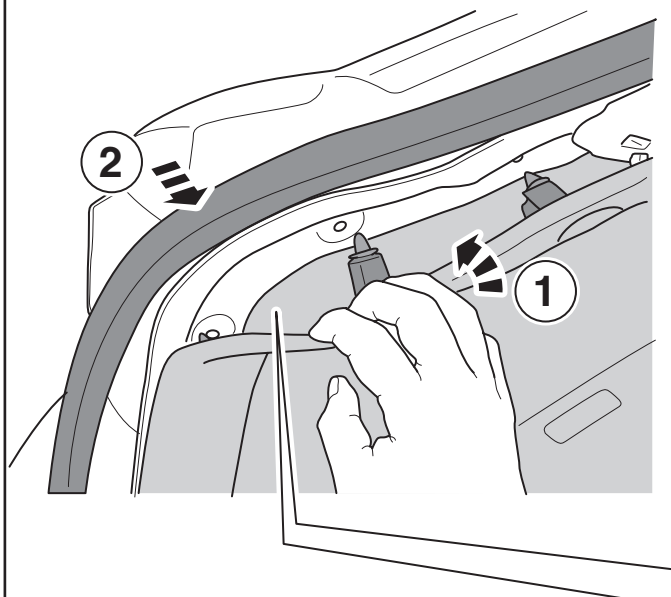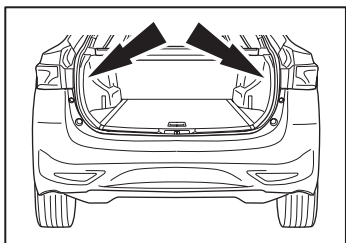

3

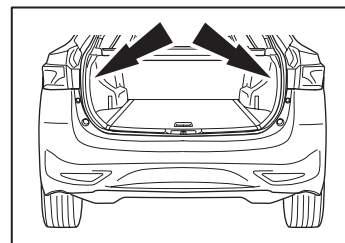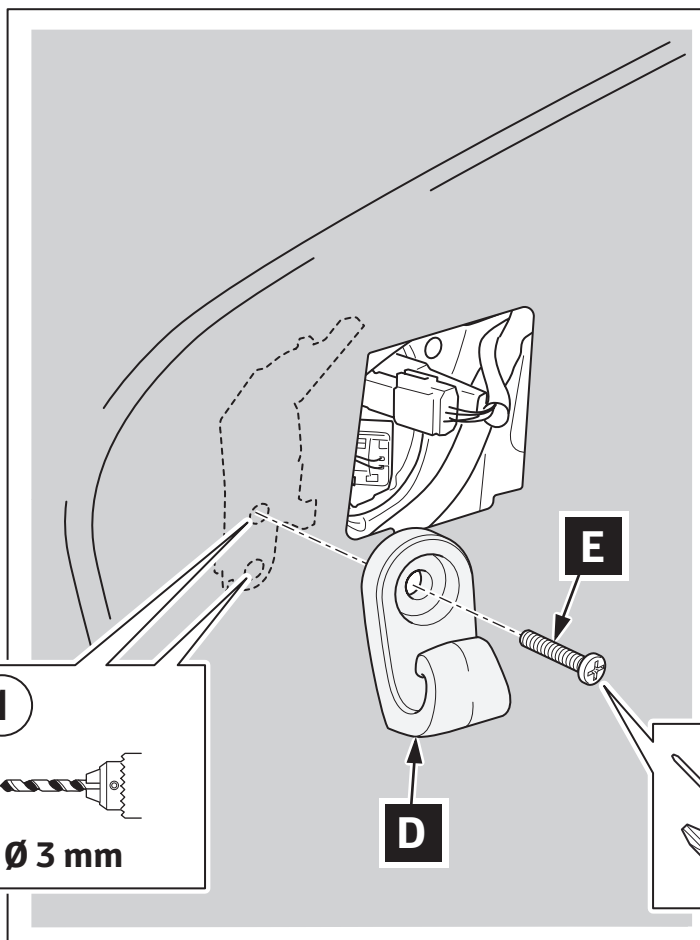

4

